

Jigsaw Blades

Product Code	Product Description	Type
BOSCHT00000001	Jigsaw Blade For Wood T101D	Wood
BOSCHT00000002	Jigsaw Blade For Metal T118A	Metal
BOSCHT00000003	Jigsaw Blade For Metal T123	Metal
BOSCHT00000004	Jigsaw Blade For Aluminium T127D	Aluminium
BOSCHT00000005	Jigsaw Blade For Wood And Metal T345XF	Wood & Metal
BOSCHT00000006	Jigsaw Blade For Ino x T118GFS	Inox
BOSCHT00000007	Jigsaw Blade For Wood T234	Wood
BOSCHT00000019	Jigsaw Blade For Metal T118B	Metal
BOSCHT00000020	Jigsaw Blade For Metal T321AF	Metal
BOSCHT00000021	Jigsaw Blade For Wood T101A	Wood
BOSCHT00000022	Jigsaw Blade For Wood T101B	Wood
BOSCHT00000023	Jigsaw Blade For Wood T101AO	Wood
BOSCHT00000024	Jigsaw Blade For Wood T101Br	Wood
BOSCHT00000025	Jigsaw Blade For Wood T101D	Wood
BOSCHT00000027	Jigsaw Blade For Wood T144D	Wood

